

Monitor mount for 2017 P-series Dell monitors

Installation guide



Notes, cautions, and warnings

 | **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 | **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 | **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2017 - 2019 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

1 Supported clients and monitors.....	4
2 Included in the tool kit.....	5
3 Mounting Wyse 5010, Wyse 5020, and Wyse 5060 clients.....	6
4 Mounting Wyse 3010, Wyse 3020, Wyse 3030, Wyse 3030LT, and Wyse 5030 clients.....	11

Supported clients and monitors

The monitor mount for 2017 P-series monitors is designed to work with the following clients and monitors:

NOTE: The mount is designed to work with Dell monitors and clients listed in this section. The mount should not be used with other Dell or third party monitors or clients.

Supported clients are:

- Dell Wyse 3010 (Tx0) thin client
- Dell Wyse 3020 (Tx0D) thin client
- Dell Wyse 3030 (N03D) thin client
- Dell Wyse 3030LT (N06D) thin client
- Dell Wyse 5010 (Dx0D) thin client
- Dell Wyse 5020 (Dx0Q) thin client
- Dell Wyse 5030 (PxN) PColP zero client
- Dell Wyse 5060 (N07D) thin client

NOTE: Installation instructions for the Dell Wyse 3040 thin client is not covered in this document. Please go to www.dell.com/support/manuals to find installation instructions for the Dell Wyse 3040 thin client.


Supported monitors are:

- P1917S
- P2017H
- P2217H
- P2317H
- P2417H
- P2717H
- U2417H
- U2718Q
- P2219H
- P2319H
- P2419H
- P2719H

Included in the tool kit

The following parts are included in the tool kit:

- 1 One screw (M2.5x0.45)
- 2 Four screws (M4x0.7-6)
- 3 Four hexagonal nuts (M4x0.7)
- 4 One stopper
- 5 One power adapter holder
- 6 One monitor mount for P-series monitors

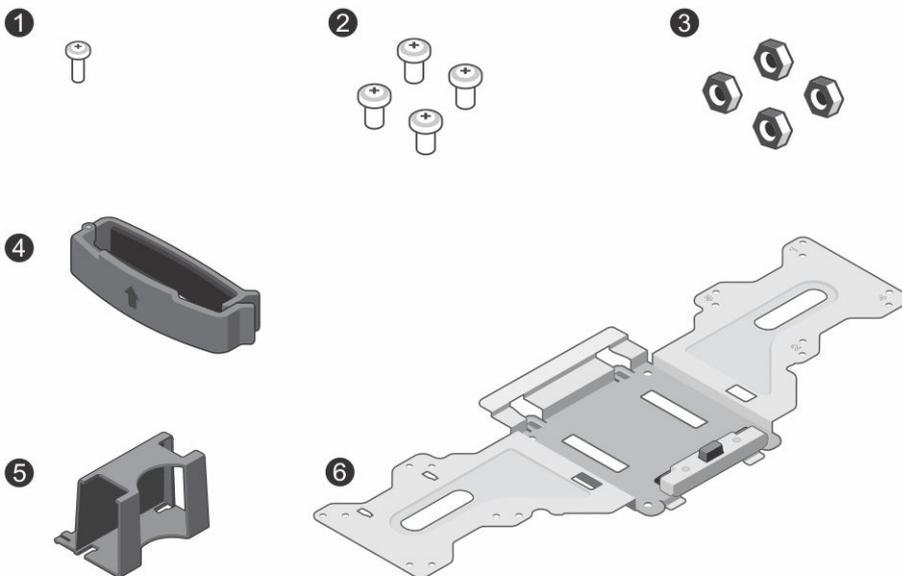


NOTE:

Dell Wyse 3040 requires wall mount 575-BBMK with the P-series mount.


Mounting Wyse 5010, Wyse 5020, and Wyse 5060 clients

Use the following instructions to attach the client to the P-series mount.

- 1 **Preparing the client**—Use a Phillips-head screwdriver to remove the four filler screws from the side of the client.

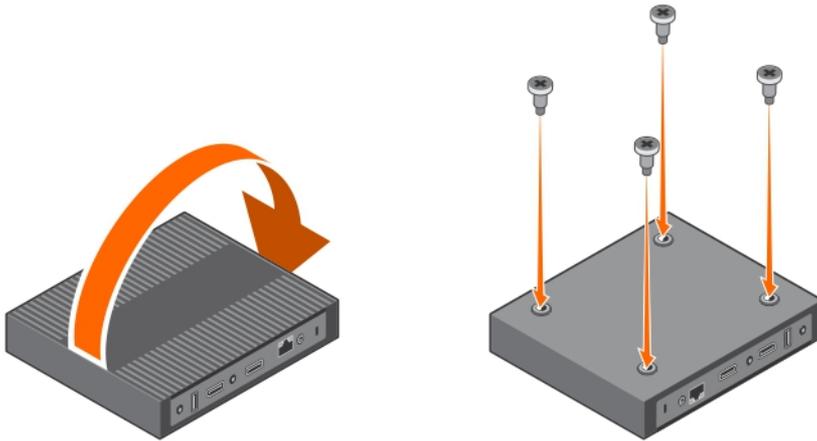


- 2 **Attaching the client**—Install the thin client on the P-series mount with the M4.07-6 screws included in the tool kit.

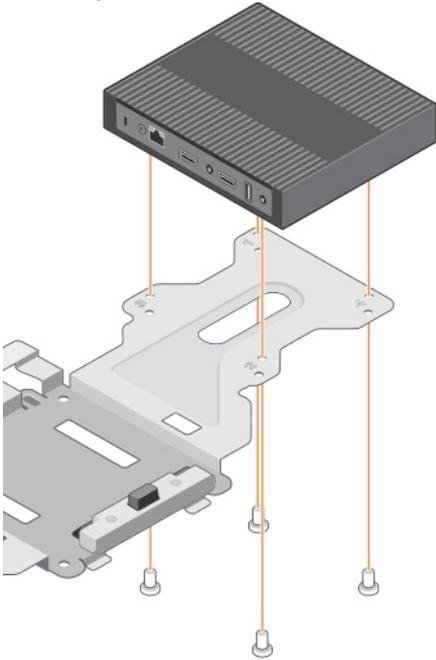


NOTE: The power button should face outwards and air vents should be on top end for proper heat dissipation.

- 3 **Attaching the power adapter holder**—Slide the small hooks downward into the vertical slotted holes and the large hooks onto the top edge of the mount. Use the M2.5x0.45 screw to secure the power adapter holder onto the mount as indicated in the following illustration.

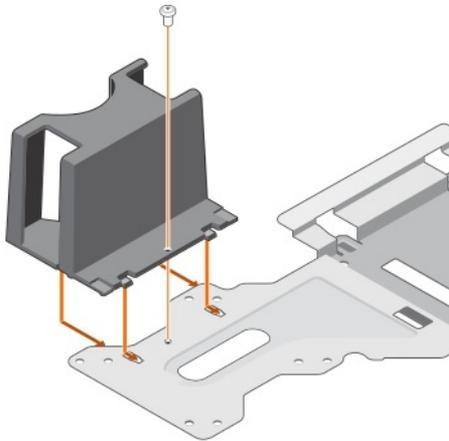


4 **Removing the monitor stand**

- a Place the monitor panel face down on a soft cloth or cushion.
- b Remove the stand from the monitor by pushing the monitor's quick release button as indicated in the following illustration.

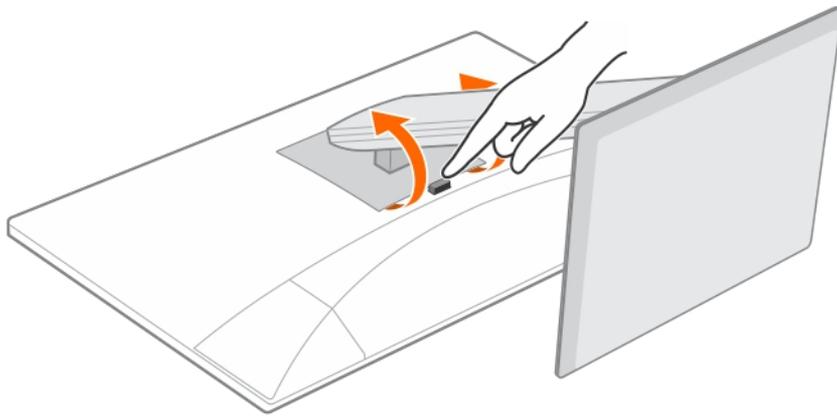


5 Attaching P-series mount to the monitor

- Remove the monitor screws from the back of the monitor, and use them when you proceed with installation later.
- Position the P-series mount on the back of the monitor. Tilt and slide the top tabs into the dedicated tab slots, and then firmly slide down bottom edge of mount until it snaps in place.

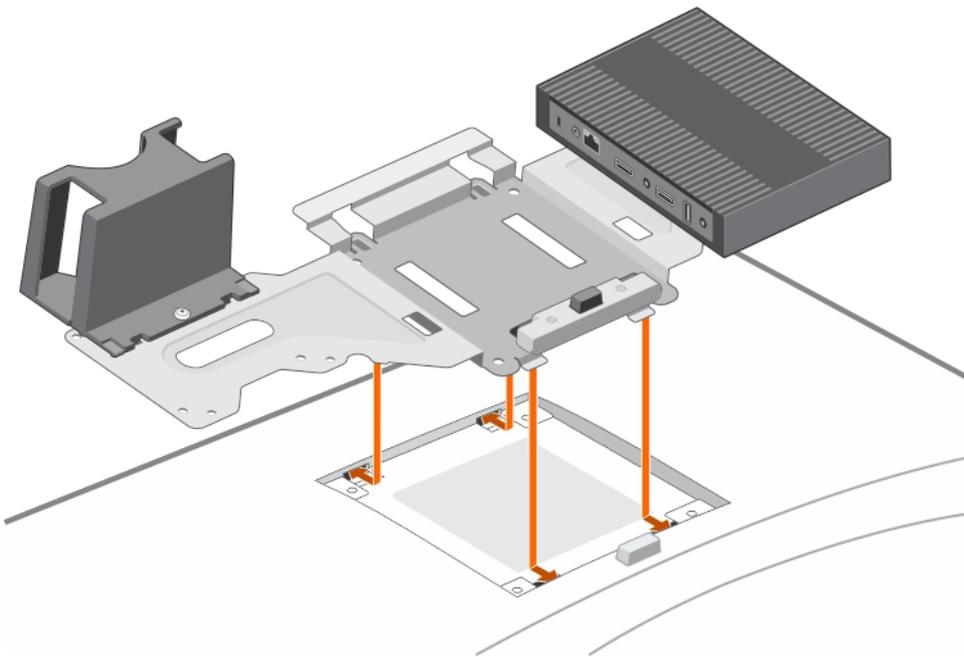


- Reinstall the monitor screws.

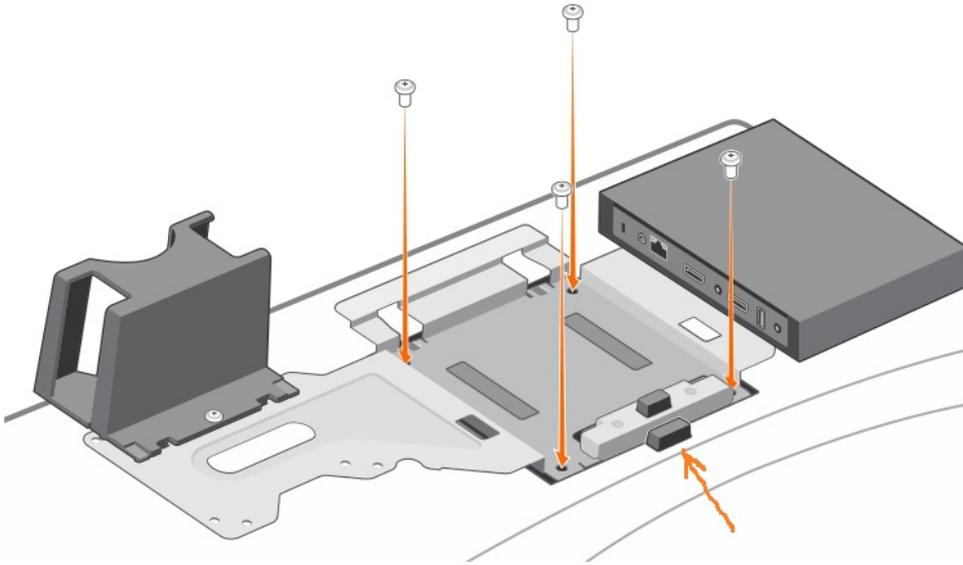

CAUTION: Do not over-tighten the screws.

- 6 **Reinstalling the monitor stand**—Insert the upper stand tabs into the dedicated space on the P-series mount and gently press down until the quick release button snaps into place. Place the monitor in the upright position.

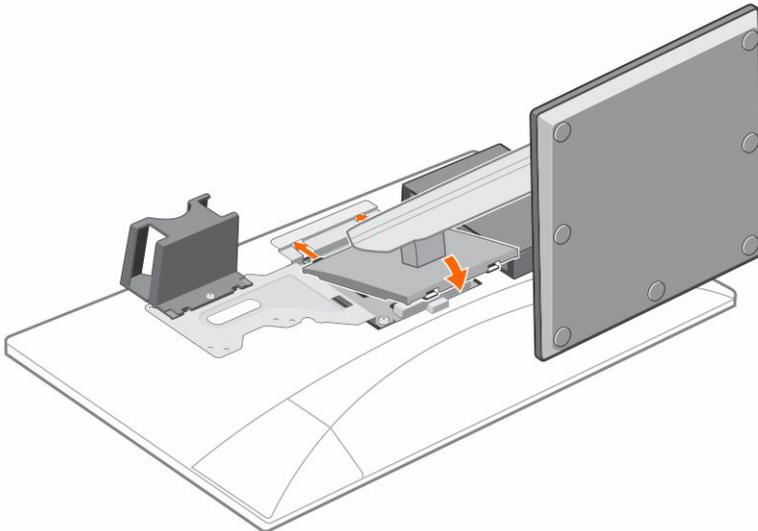

7 **Adjusting and securing monitor height (optional)**

- For portrait orientation—Raise the monitor to the maximum height and attach the stopper. Ensure that the arrow on the stopper is facing up and facing front side of the stand. Wrap the stopper around the stand and snap the ends.
- For landscape orientation—Adjust the monitor height and attach stopper. Ensure that the arrow on the stopper is facing up and facing front side of the stand, and then snap the stopper ends.



NOTE:

The stopper is required for P-series monitors to hold the monitor in place at the desired height.

- 8 **Connecting cables**—To complete the setup, make all the desired connections, and then plug in the power adapter to an electrical outlet.

Mounting Wyse 3010, Wyse 3020, Wyse 3030, Wyse 3030LT, and Wyse 5030 clients


Use the following instructions to mount the Wyse 3010, Wyse 3020, Wyse 3030, Wyse 3030LT, and Wyse 5030 clients to the P mount. These clients require mounting of the client to their respective horizontal stands before installing the thin client to the P-series monitor mount. Horizontal stands required by thin client model are:

Table 1. Client name and part number

Client name	Part number
Wyse 3010	XXJ7P
Wyse 3020/5030	92GX5
Wyse 3030/3030LT	GYTXN

1 Preparing the client and attaching the power adaptor

- If the thin client is installed on the horizontal stand, remove it from the stand. On the inside of the horizontal stand, slide one of the four hex nuts which come with the tool kit into one of the four screw holes.
- From outside of the horizontal stand, insert a shoulder screw into the hex nut and tighten it.
- Repeat for remaining three hex nuts and shoulder screws.
- Insert the client into the horizontal stand, with the power button facing upward, and the extended plastic ledge on the opposite side.
- To install the power adapter holder, slide the small hooks downward into the vertical slotted holes and the large hooks onto the top edge of the mount. Use the M2.5x0.45 screw to secure the power adapter holder onto the mount as indicated in the following illustration.

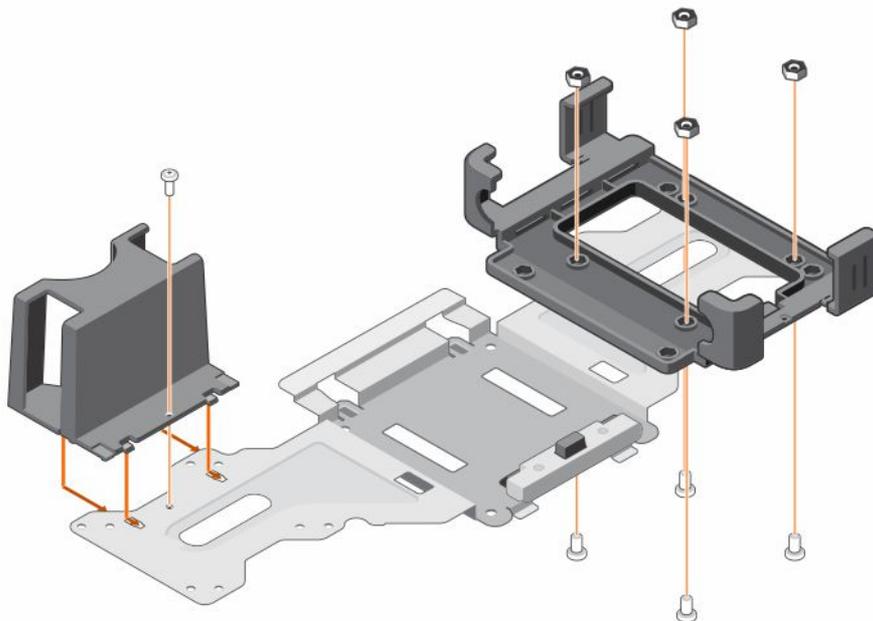


NOTE:

Slide the hex nut across the stand surface so that it easily slips into the recessed cut-out in the horizontal stand.

Use the plastic bracket with the hex holes.


2 Removing the monitor stand

- a Place the monitor panel face down on a soft cloth or cushion.
- b Remove the stand from the monitor by pushing the monitor's quick release button as indicated in the following illustration.

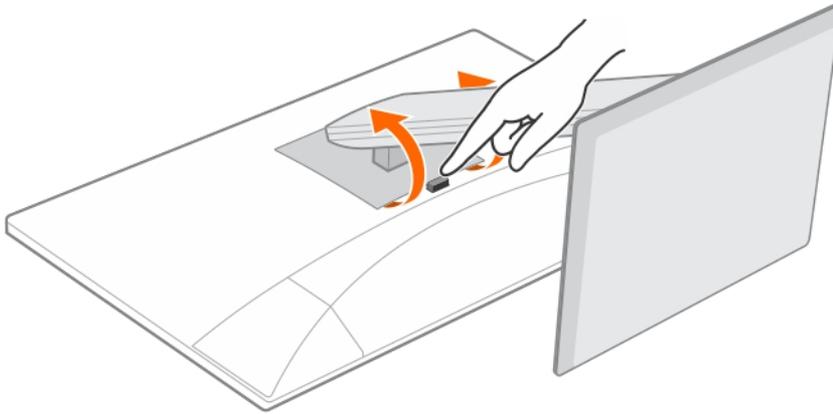


3 Attaching P-series mount to the monitor

- a Remove the monitor screws from the back of the monitor and use them when you proceed with installation later.
- b Position the P-series mount on the back of the monitor. Tilt and slide the top tabs into the dedicated tab slots, and then firmly slide down bottom edge of mount until it snaps in place.
- c Reinstall the monitor screws.

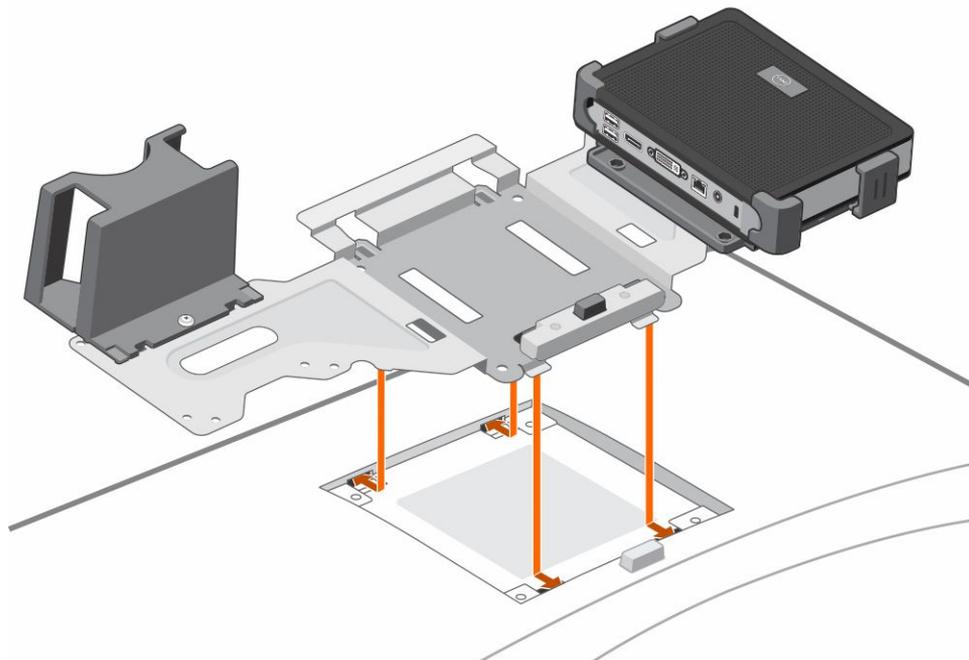

- 4 **Reinstalling the monitor stand**—Insert the upper stand tabs into the dedicated space on the P-series mount and gently press down until the quick release button snaps into place. Place the monitor in the upright position.

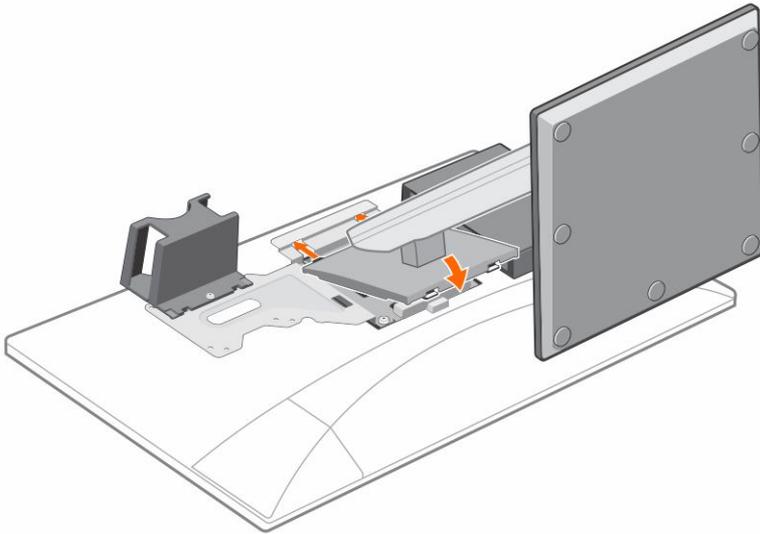

5 **Adjusting and securing monitor height (optional)**

- a For portrait orientation—Raise the monitor to the maximum height and attach the stopper. Ensure that the arrow on the stopper is facing up and facing front side of the stand. Wrap the stopper around the stand and snap the ends.
- b For landscape orientation—Adjust the monitor height and attach stopper. Ensure that the arrow on the stopper is facing up and facing front side of the stand, and then snap the stopper ends.



NOTE:

- The stopper is required for P-series monitors to hold the monitor in place at the desired height.
- If you are using a Dell Wyse 5030 zero client with either a P2219H, P2319H, P2419H, or P2719H monitor, the stopper is not required.

- 6 **Connecting cables**—To complete the setup, make all the desired connections, and then plug in the power adapter to an electrical outlet.