

# Getting started - K380 Multi-Device Bluetooth Keyboard

Enjoy the comfort and convenience of desktop typing on your desktop computer, laptop, smartphone, and tablet. The Logitech Bluetooth® Multi-Device Keyboard K380 is a compact and distinctive keyboard that lets you communicate and create on your personal devices, anywhere in the home.

Convenient Easy-Switch™ buttons make it easy to simultaneously connect with up to three devices via Bluetooth® wireless technology and instantly switch among them.

The OS-adaptive keyboard automatically remaps keys for the selected device so you're always typing on a familiar keyboard with favorite hotkeys where you expect them.

## Logi Options+

In addition to optimizing the keyboard for your preferred operating system, the software lets you customize the K380 to fit your individual needs and personal style.

## K380 AT A GLANCE



1 — Easy-Switch keys


Press to connect and select devices

2 — Bluetooth status lights

Show state of Bluetooth connection

3 — 3 Split keys

Modifier based on type of device connected to keyboard Above: Windows® and Android™. Below: Mac OS® X and iOS®

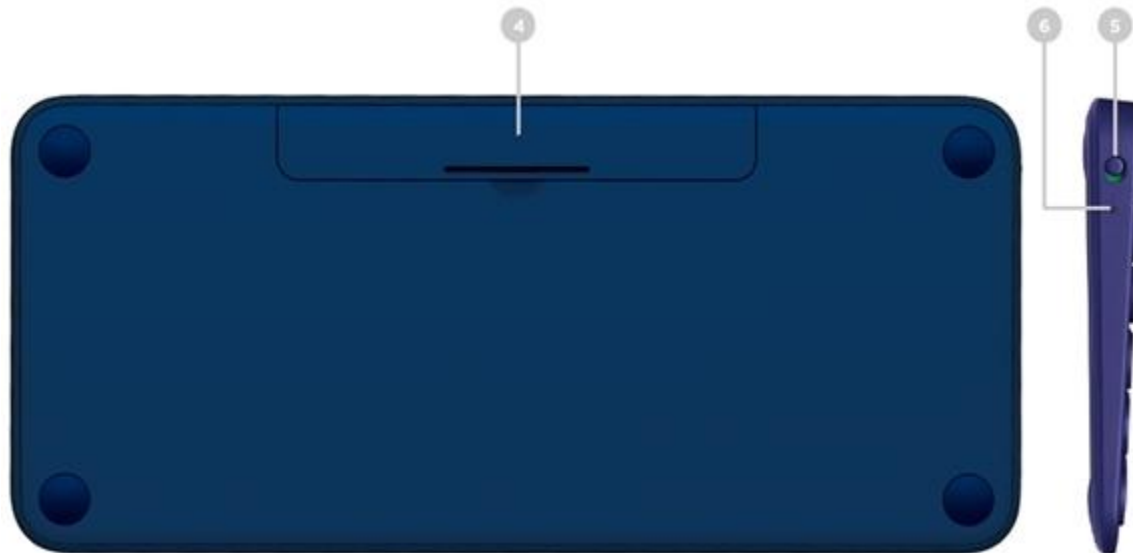

4 — Battery compartment

5 — On/off switch

6 — Battery status light

## DETAILED SETUP

1. Pull the tab on the back side of the keyboard to power it on. The LED on the Easy-Switch button should blink rapidly. If not, hold down the button for three seconds.



2. Connect your device using Bluetooth:
  - Open the Bluetooth settings on your computer to complete the pairing. Steady light for 5 seconds on the button indicates successful pairing. If the light blinks slowly, hold down the button for three seconds and try pairing via Bluetooth again.
  - Click [here](#) for more details on how to do this on your computer. If you experience issues with Bluetooth, click [here](#) for Bluetooth troubleshooting.
3. Install Logi Options+ Software. Download Logi Options+ to use all the possibilities this keyboard has to offer. To download and learn more, go to [logitech.com/optionsplus](https://logitech.com/optionsplus).

## PAIR TO A SECOND COMPUTER WITH EASY-SWITCH

Your keyboard can be paired with up to three different computers using the Easy-Switch button to change the channel.

1. Select the channel you want using the Easy-Switch button — press and hold the same button for three seconds. This will put the keyboard in discovery mode so it can be seen by your computer. The LED will start blinking rapidly.
2. Open the Bluetooth settings on your computer to complete the pairing. You can find more details [here](#).
3. Once paired, a short press on the Easy-Switch button lets you switch channels.

## Re-pairing a device

If a device becomes disconnected from the keyboard, you can easily re-pair the device with the keyboard. Here's how:

### On the keyboard

- Press and hold down an Easy-Switch button until the status light starts blinking rapidly. The keyboard is now in pairing mode for the next three minutes.

### On the device

1. Go to Bluetooth settings on your device and select **Logitech Bluetooth® Multi-Device Keyboard K380** when it appears in the list of available Bluetooth devices.
2. Follow the onscreen instructions to complete the pairing.
3. Upon pairing, the status LED on the keyboard stops blinking and remains steady for 10 seconds.

## INSTALL

## SOFTWARE

Download Logi Options+ to use all the possibilities this keyboard has to offer. In addition to optimizing the K380 for your operating system, Logi Options+ lets you customize the keyboard to fit your needs and personal style — create shortcuts, reassign key functions, display battery warnings, and much more. To download and learn more, go to [logitech.com/optionsplus](https://logitech.com/optionsplus).

Click [here](#) for the list of supported OS versions for Options+.

## FEATURES












Explore the advanced features your new keyboard offers:

- **Shortcuts and function keys**
- **OS-adaptive keyboard**
- **Power management**

## SHORTCUTS AND FUNCTION KEYS

## Hot keys and media keys

The table below shows hot keys and media keys available for Windows, Mac OS X, Android and iOS.


Keys	Windows 7 Windows 10 Windows 11	macOS Catalina macOS Big Sur macOS Monterey	iPadOS 13.4+ iOS 13.4+	Android	Chrome OS
	Home (Launch web browser)	Mission Control*	Home (Go to Homescreen)	Home (Go to Homescreen)	Home (Go to Homepage in web browser)
	App Switch	Launchpad	Home Screen	App Switch App Switch	App Switch
	Contextual menu	Does nothing	Does nothing	Contextual menu	Contextual menu
	Back	Back	Back	Back	Back
	Previous Track	Previous Track	Previous Track	Previous Track	Previous Track
	Play / Pause	Play / Pause	Play / Pause	Play / Pause	Play / Pause
	Next Track	Next Track	Next Track	Next Track	Next Track
	Mute	Mute	Mute	Mute	Mute
	Volume Down	Volume Down	Volume Down	Volume Down	Volume Down
	Volume Up	Volume Up	Volume Up	Volume Up	Volume Up
	Delete	Forward Delete	Forward Delete	Delete	Delete








\*Requires installation of Logitech Options software

## Shortcuts

To perform a shortcut hold down the fn (function) key while pressing the key associated with \_\_\_\_\_ an \_\_\_\_\_ action.

The table below provides function key combinations for different operating systems.

Keys	Android	Windows 7 Windows 10 Windows 11	Mac OS X	iOS
	Print screen	Print screen	Screen lock*	Capture screen

	Cut	Cut	Cut	Cut
	Copy	Copy	Copy	Copy
	Paste	Paste	Paste	Paste
	Home (when editing text)	Home (when editing text)	Select previous word	Select previous word
	End (when editing text)	End (when editing text)	Select next word	Select next word
	Page up	Page up	Page up/Increase brightness*	
	Page down	Page down	Page down/Decrease brightness*	

\*Requires installation of Logitech Options software

### Logi

### Options+

If you typically use function keys more often than shortcut keys, install Logi Options+ software and use it to set up shortcut keys as function keys and use the keys to perform functions without having to hold down the Fn key.

### OS-adaptive

### keyboard

The Logitech Keyboard K380 includes OS-adaptive key that have different functions, depending on the operating system of the device you're typing on. The keyboard automatically detects the operating system on the currently selected device and remaps keys to provide functions and shortcuts where you expect them to be.

### Manual


### selection

If the keyboard fails to correctly detect the operating system of a device, you can manually select the operating system by performing a long press (3 seconds) of a function key combination.

To select an OS:

Hold down key combination

for 3 seconds



Mac OS X / iOS

Windows / Android



Chrome

## Multi-function

## keys

Unique multi-function keys makes the Logitech Keyboard K380 compatible with most computers and mobile devices. Key label colors and split lines identify functions or symbols reserved for different devices and operating systems.

## Key label color

Gray labels indicate functions available on Apple devices running Mac OS X or iOS. White labels on gray circles identify symbols reserved for use with Alt Gr on Windows computers.\*

## Split keys

Modifier keys on either side of the space bar display two sets of labels separated by split lines. The label above the split line shows the modifier sent to a Windows, Android, or Chrome device. The label below the split line shows the modifier sent to an Apple Macintosh, iPhone, or iPad. The keyboard automatically uses modifiers associated with the currently selected device.

\*The Alt Gr (or Alt Graph) key that appears on many international keyboards replaces the right Alt key normally found to the right of the spacebar. When pressed in combination with other keys, Alt Gr enables entry of special characters.

## Reserved key labels



Gray

Reserved for use with Apple computers (Mac OS X) or iPhones and iPads (iOS)

Example (Mac OS X or iOS)



White on gray circle

Symbol reserved for use with Alt Gr on computers using Windows

Example (Windows)



## Split key labels




Above: Windows and Android

Below: Mac OS X and iOS



## Power management

- **Check battery level**  
The status LED on the side of the keyboard turns red to indicate battery power is low and it's time to change batteries.
- **Replace batteries**
  1. Lift the battery compartment up and off the base.
  2. Replace the spent batteries with two new AAA batteries and reattach the compartment

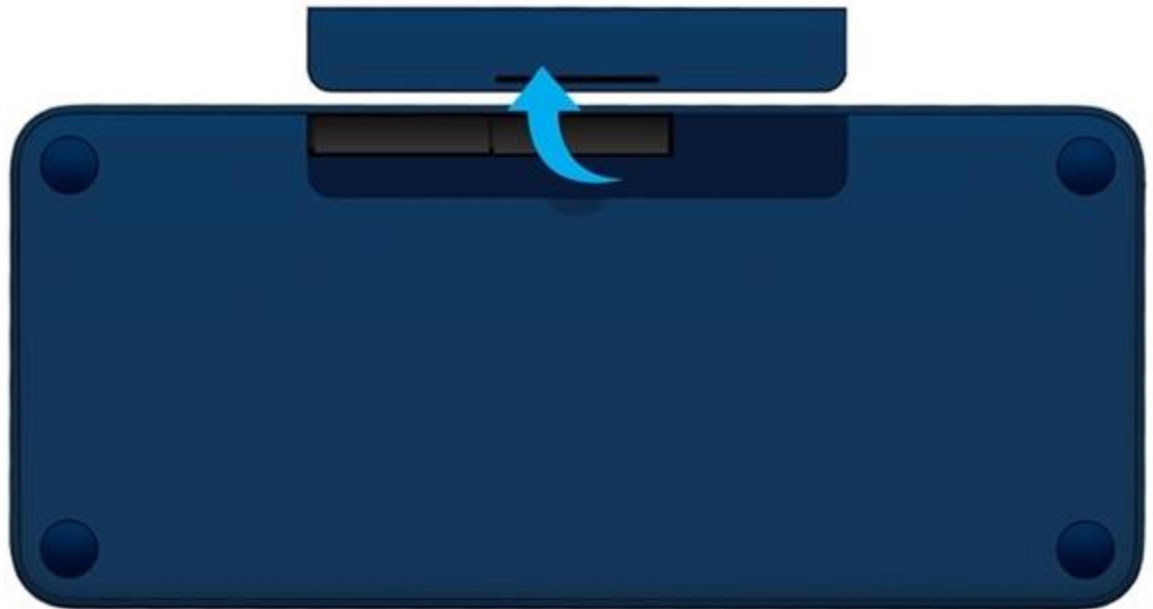

**TIP:** Install Logi Options+ to set up and receive battery status notifications.

### Compatibility

BLUETOOTH	WIRELESS	TECHNOLOGY	ENABLED	DEVICES:	
Apple Mac	OS X	(10.10	or	later)	
Windows	7,	8,	10	or	later OS

Chrome  
Android  
Android 3.2 or later

OS™