



Read this manual carefully before use, and retain it for future reference.

Safety Instructions

⚠ WARNINGS

Usage restrictions

- Do not use the massage gun on the head, face, elbows, knees and other joints, spine or other bony areas with minimal muscle coverage.
- Do not use the massage gun on the sides, front or back (cervical vertebrae) of the neck to avoid damages to the carotid sinus. Otherwise, it could lead to fainting and cardiac arrest.
- Do not use the massage gun on the underarms, the inside of upper arm, the inner side of clavicle, the inside of elbow, the back of knee, the abdomen, the kidney area, the genitals or other fragile areas with dense nerves and blood vessels.
- Do not use the massage gun below the abdomen of persons with urinary diseases, such as kidney stones, ureteral stones, bladder stones, urethral stones, urinary tract infections, etc.
- Do not use the massage gun on the body areas with bruises or pain, surface wounds, local fever, red swelling or discomfort, inflammation, muscle spasms, muscle lacerations, acute sprains, contusions, and strains.
- Do not use the massage gun if symptoms such as fever, nausea, vomiting, or muscle pain or weakness occur after strenuous exercise, and medical attention should be sought immediately.
- Do not use the massage gun on persons with the following diseases: cardiovascular and cerebrovascular diseases, blood diseases, coagulation disorders, thrombocytopenic purpura, neck plaque, varicose veins, venous thrombosis, cancer, tumors, and mental illness.
- Do not use the massage gun on persons with fractures or metal implants.
- Do not use the massage gun while driving or conducting precise operations.
- Do not use the massage gun continuously for a prolonged period of time, so as to prevent muscle damage caused by excessive massaging.

CAUTIONS

Precautions

- Do not place fingers, hair or other parts of the body near the joint between the massage head and the muzzle of the massage gun during operation to avoid being pinched.
- Do not block or insert foreign objects into the massage head groove or charging port. Otherwise, this may cause burns or electric shocks, or cause a fire due to a short circuit.
- Do not immerse the massage gun in water or other fluids.
- Do not use the massage gun in humid environments.
- Charge and use it under an ambient temperature of 0°C to 35°C.
- Keep the massage gun away from sources of water and fire, as well as corrosive environments to avoid affecting battery performance.
- Do not attempt to repair, disassemble or modify the massage gun by yourself.
- Do not use the massage gun while charging.
- Please use the original power adapter and original charging cable to charge according to the specifications in the user manual.
- Unplug the massage gun from the charger after it is fully charged.
- Charge the massage gun before use if it has not been used for a long period of time.
- The massage head is partly made of silicone. For people allergic to silicone, please do not use the round head and the U-shaped head, and the flat head is recommended.

Groups that are not suitable to use this massage gun:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Please consult a surgeon or attending doctor of a hospital before use if any of the following conditions are met, and use under supervision after obtaining permission.

- Women who are pregnant or who have just given birth.
- People who are 60 years old and above.
- People with rhabdomyolysis.
- People with missing limbs or paraplegics.
- People with heart pacemakers or stents.
- People who have undergone surgery within the past 12 months.
- People with impaired limb perception or mobility due to disease or age.
- People with abnormal spine, joints or bones, or who suffer from orthopedic diseases such as osteoporosis, cervical spondylosis and lumbar disc herniation.
- People with any disease-related complications (such as neuropathy or retinal damage).
- People with urinary diseases such as kidney stones, ureteral stones, bladder stones, urethral stones or urinary tract infections.

Other precautions

- Avoid dropping, shaking or hitting the massage gun. Strong impacts may damage the components or cause abnormal operation. If the above occurs, please consult the after-sales service team in a timely manner.
- Continuous use of the massage gun over a long period of time may cause a rise in its surface temperature, which may cause damage to it. Do not use it too long at a time.
- In the event the massage gun heats up, emits smoke or buzzes excessively, etc., stop using it immediately and contact the after-sales service team.
- If the massage gun becomes overheated or deformed, swells, or the battery leaks during use, stop using it immediately and contact the after-sales service team.

Removing the battery

WARNINGS

The massage gun will no longer be usable once the battery is removed.

The following steps should only be completed upon the permanent disposal of the massage gun. Do not dismantle the massage gun on your own for routine maintenance.

 
1. Disconnect the massage gun from the power supply and remove the shell.
2. Cut off the cables connecting the battery, motor and NTC in sequence.
3. Remove the battery and use insulating glue to seal broken cable surfaces.
4. Dispose of the battery at a designated recycling facility, and follow all local environmental protection laws, regulations and guides when doing so.

CAUTIONS

- The battery must be removed before disposing of the massage gun.
- Disconnect the massage gun from the power supply before removing the battery.
- The massage gun must only be dismantled by a professional.

Product Overview

1. Massage Gun

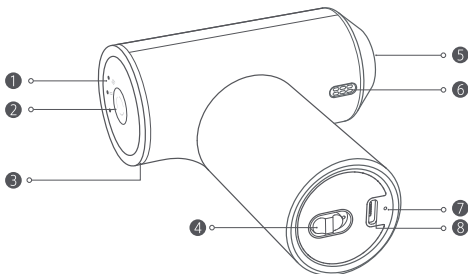

- | | |
|--|-------------------------|
| ① Speed Indicators | ② Speed Button |
| ③ Pressure Sensor Indicator | ④ On/Off Button |
| ⑤ Muzzle (For installing massage head) | ⑥ Heat Dissipation Vent |
| ⑦ Charging Indicator | ⑧ Charging Port |

 
Massage Gun Uses

- Relieve delayed muscle soreness after exercise, and relax tight muscles.
- Relieve muscle soreness or stiffness in the back and shoulders caused by prolonged sitting and poor posture.
- Help muscles relax through daily massage.


2. List of Product Accessories



Massage Gun

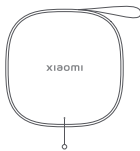

Storage Case

 

Fast Charging Cable



User Manual



Round Head



U-shaped Head



Flat Head



Power Adapter


- Round head: Suitable for massaging larger muscle groups such as shoulders, waist, arms, hips, thighs, and calves.
- U-shaped head: Suitable for massaging the back, the sides of the spine and calves.
- Flat head: Suitable for relaxing all muscles.

Note

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Assembly

 1. Installing the Massage Head



- 1 Install an appropriate massage head for the desired type of massage.
- 2 When installing the massage head, push the massage head base into the muzzle of the massage gun with force, ensuring that the line on the head is flush with the muzzle.

⚠ Note

The red line in the figure is the schematic line for installation, while it is a glossy surface on the actual product.

2. Disassembling the Massage Head

When disassembling the massage head, hold the massage head and rotate it counterclockwise while pulling upward from the muzzle.

⚠ WARNING

Please install and disassemble the massage head when the massage gun is turned off, and ensure that the massage head is installed firmly before turning on the massage gun. Do not adjust, install or remove the massage head during use to avoid being pinched.

How to Use

1. Charging

- Turn off the massage gun, plug the charging cable into the charging port, and then connect to a power supply. The massage gun cannot be turned on while charging.
- If the charging cable is connected to a power supply and plugged into the charging port of the massage gun while it is on, the massage gun will automatically turn off and start charging.

2. Turning On/Turning Off/Switching Modes



Turning on: Push the on/off button at the bottom to the "I" side (the red indication mark will be exposed now), the three speed indicators will light up at the same time. After blinking once, speed 2 and 3 indicators will turn off at the same time, and the speed 1 indicator will remain on. The massage gun will start at speed 1 when you press the speed button. The massage gun will enter a smart standby mode after 15 minutes of continuous use. Press the speed button to restart it. (The massage gun will automatically turn off if there is no operation for 10 minutes. Manually push the on/off button to the "O" side to restart the massage gun.)

Turning off: When the massage gun is turned on, push the on/off button on the bottom to the "O" side (the red indication mark is hidden now), the indicator for the current speed will go out, and the massage gun will turn off.

 
Adjusting speed: Press the speed button to change speed. The three indicators correspond to three different speeds: Speed 1, Speed 2 and Speed 3.

Pausing: Double-press the speed button to pause, and press it again to resume use. The massage gun will automatically turn off if it is not used for 10 minutes after being paused. Manually push the on/off button to the "O" side to restart the massage gun.

Restarting after block & stop: If the pressure is too high, the massage gun will enable block & stop protection. Press the speed button again to restart the massage gun with speed 1 by default.

3. Indicators

① Speed Indicators

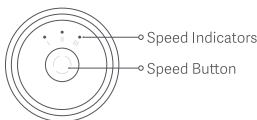

The speed indicators correspond to Speed 1, Speed 2 and Speed 3 from left to right. When you cycle through the speeds, their corresponding indicators will be lit up in white.

② Pressure Sensor Indicator



 
White



Orange

- If the light ring is not on, it means the massage intensity is low and mild massaging effect is applied. Intensity can be adjusted according to user needs.
- If the light ring is white, the massage intensity is moderate and normal massaging effect is applied. Intensity can be adjusted according to user needs.
- If the light ring is orange, the massage intensity is high. Intensity can be adjusted to user needs, so as to avoid harming the muscle due to excessive pressure.

3 Charging Indicator



- Breathing in red: Battery less than 20%, please charge in a timely manner.
- Breathing in white: Charging.
- The indicator goes out during charging: Battery fully charged, please disconnect from the power source. If charging the massage gun when its battery is full, the indicator will go out after breathing for 20 seconds.

4. Using the Massage Gun

- Install an appropriate massage head, turn on the massage gun and select a suitable speed according to personal experience. It is recommended to start at a low speed.
- Gently press the massage head against the muscles that need relaxation and move slowly back and forth. If there is a particularly sore area, apply an appropriate pressure at the point that feels tender and keep it there for 15–30 seconds.
- The massage gun has a pushing force, and thus it is not advisable to use excessive force when applying pressure, so as not to harm muscles or bones.
- It is recommended to use on areas with adequate muscle coverage, and to not stay in the same area for more than 60 seconds.
- The recommended usage duration is 10 minutes. If soreness is still felt, the massage time can be extended appropriately.
- The recommended duration of a single use should not exceed 15 minutes, and the duration of continuous use should not exceed 30 minutes.

Care & Maintenance

1. Cleaning

- Wipe the massage gun and massage heads regularly with a clean, slightly damp soft cloth or wet tissue, and dry them with a dry cloth or paper towel before putting them back into storage case or packaging box.
- Do not rinse in water or expose the massage heads to direct sunlight.
- When cleaning, make sure the massage gun is turned off and unplugged.
- Do not use corrosive liquids to clean the massage gun, as this may damage or crack the massage gun or change its color.

2. Storage

- Store the massage gun in a cool, dry place.
- Do not store the massage gun in an environment above 40°C or below -10°C. Keep it away from moisture, sources of water or fire, or corrosive environments, so as not to affect battery performance.
- The massage gun can be put in the supplied storage case for storage or travel.
- Do not hit, squeeze, drop, throw, or scratch the massage gun.
- The massage gun can be transported in cars, trains, ships, and planes. It should be secured in place facing upwards to prevent damage from squeezing, vibrations, collisions, rolling, or falling during transport.
- Charge the massage gun before use if it has not been used for a long period of time.
- If the massage gun becomes overheated or deformed, swells, or the battery leaks during storage, stop using it immediately and contact the after-sales service team.

Troubleshooting

Issues	Possible Causes	Solutions
The indicator does not light up while charging.	The power adapter is not properly connected to the massage gun.	Make sure the power adapter is plugged in correctly.
	The charging indicator goes out normally after the massage gun is fully charged.	The massage gun can be used normally.
The battery charges slowly.	The battery temperature is too high or too low.	Wait until the battery temperature returns to normal, then resume use.
The massage gun does not work.	The massage gun is out of battery or has a low battery.	Charge the massage gun before use.
	The massage gun experiences block & stop due to excessive pressure.	Restart the massage gun.
The motor makes abnormal noises.	A foreign object has entered the motor.	Please contact the after-sales service team to arrange maintenance.
	There is a motor error.	Please contact the after-sales service team to arrange maintenance.
The massage gun's temperature is too high.	Usage time is too long.	Wait for the temperature of the massage gun to return to normal before resuming use. The recommended duration of a single use should not exceed 15 minutes, and the duration of continuous use should not exceed 30 minutes.

Note: If above problems persist, please contact the after-sales service team.

EU Declaration of Conformity



We, Zhuhai Yunmai Technology Co., Ltd., hereby declare that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/service/support/declaration.html>

WEEE Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Specifications

Name: Xiaomi Massage Gun Mini

Model: XMFG-M352

Item Dimensions: 101 × 139 × 45 mm

Net Weight: 380 g

Power Adapter Rated Input: 100–240 V~, 0.6 A

Power Adapter Rated Output: 5.0 V=3 A 15W 9.0 V=2.23 A 20.0 W

12.0 V=1.67 A 20.0 W 10.0 V=2.25 A Max. 22.5 W Max.

Massage Gun Rated Input 1: 9 V = 1.5 A (For fast charging)

Massage Gun Rated Input 2: 5 V = 2 A (For normal charging)

Battery Capacity: 2600 mAh

Battery Type: Rechargeable lithium-ion battery

Operating Temperature: 0°C to 35°C

Operating Humidity: 10% to 85% RH

Production Date: Please refer to the packaging

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Zhuhai Yunmai Technology Co., Ltd.

(a Mi Ecosystem company)

Address: Unit 1201-1203, Youte Headquarters Building, No. 88 Xingye

Road, Xiangzhou District, Zhuhai, Guangdong, China

For further information, please go to www.mi.com

User Manual Version: V1.0

使用產品前請仔細閱讀本說明書，並妥善保管。

安全須知

▲警告

使用禁忌

- 禁止在頭部、臉部、手肘膝蓋等關節、脊椎等肌肉覆蓋較少的骨骼部位使用本品。
- 禁止在頸部側面、前側、後側頸椎處使用本品，以免損傷頸動脈竇，導致昏厥、心臟驟停。
- 禁止在腋下、上臂內側、鎖骨內側面、肘關節內側、膝蓋後側膕窩、腹部、腎臟區域、生殖器等神經血管密集的脆弱部位使用本品。
- 腎結石、輸尿管結石、膀胱結石、尿道結石、尿路感染等泌尿疾病患者，禁止在腹部以下使用本品。
- 禁止在淤青、身體疼痛、體表傷口、局部發熱、紅腫不適、急性炎症、肌肉痙攣、肌肉撕裂傷、急性扭傷、挫傷、拉傷部位使用本品。
- 劇烈運動後如出現全身發熱、噁心、嘔吐、肌肉疼痛無力等症狀，禁止使用本品並立即就醫。
- 患有以下疾病者禁止使用本品：心腦血管疾病、血液病、凝血功能障礙、血小板減少性紫癜、頸部斑塊、靜脈曲張、靜脈血栓、癌症、腫瘤、精神類疾病。
- 骨折、體內有鋼釘患者禁止使用本品。
- 禁止在精密操作或駕駛時使用本品。
- 請勿長時間連續使用本品，防止因過度按摩造成肌肉損傷。

▲ 注意

注意事項

- 機器運行時，請勿將手指、頭髮或身體其他部位靠近按摩頭與機器接口處，以免夾傷。
- 請勿堵塞或將異物插入按摩頭安裝凹槽、充電接口，否則可能導致燙傷、觸電或因短路而引發火災。
- 請勿將本品浸泡在水中或其他液體中。
- 請勿在潮濕環境下使用本品。
- 請在 0~35℃ 的環境下使用、充電。
- 遠離水源、火源、具有腐蝕性的環境，以免影響電池效能。請勿自行修理、拆卸或改裝本品。
- 請勿在充電狀態下使用本品。
- 充電完成後，請及時將充電器從產品上拔出。
- 請依據使用手冊中的規格，使用原廠適配器和原廠充電線來充電。
- 長時間未使用本品，如需重新啟用，請提前充電。
- 按摩頭部分配件為矽膠材質，矽膠過敏人群請勿使用球形頭和 U 形頭，建議使用平扁頭。

不適宜人群

本設備可供 8 歲及以上兒童使用，或身體、感官或智力能力下降或缺乏經驗和知識的人使用，但須安全地接受有關使用該器具的監督或指導，並明白有關的危害。兒童不得將本裝置當作玩具使用。兒童不得在無人監督的情況下清潔本裝置及為其進行用戶維護。如符合以下任何一種情況，使用前請諮詢外科醫生或主治醫生，得到許可後在陪同下進行使用。

- 懷孕、產褥期女性。
- 肢體缺失、高位截癱。
- 60 周歲以上人群。
- 已安裝心臟起搏器、支架。
- 橫紋肌溶解綜合症。
- 12 個月內進行過手術治療。
- 因疾病、年齡引起的肢體知覺異常、行動不便者。
- 脊椎、關節、骨骼有異常，患有骨質疏鬆、頸椎病、腰椎間盤突出等骨科疾病。
- 身體尚存在其他疾病所引發的併發症，如神經病變或視網膜損傷等。
- 腎結石、輸尿管結石、膀胱結石、尿道結石、尿路感染等泌尿疾病患者。

其他異常和故障處理

- 避免摔落、搖晃或撞擊本品，強烈的衝擊可能造成零部件損壞，導致工作異常，如出現以上情況，請及時諮詢售後處理。
- 長時間持續使用本品可能導致機器表面溫度升高，導致機器損壞，請勿連續使用操作。
- 如出現發熱、冒煙、機器蜂鳴聲過大等情況，請立即停止使用，並聯絡售後處理。
- 如在使用過程中出現機器溫度過高、變形、膨脹、電池漏液等現象，請立即停止使用並與售後服務中心聯絡。

拆卸電池



警告：拆卸電池後，產品將報廢。

下述操作僅供廢棄產品時參考，日常使用維護請勿自行拆卸。

 
1. 切斷外接電源，拆掉產品外殼。
2. 依次剪斷連接電池、馬達、NTC 的連接線。
3. 拆卸電池，並用絕緣膠體分別粘住電源線斷口處。
4. 廢棄電池請放置到固定回收點，請遵照當地環境法律法規與指南處置。

注意：

- 在廢棄器具前，必須將電池從器具中取出。
- 取出電池前，必須先將器具斷電。
- 非專業人員請勿自行拆卸！

產品介紹

1. 產品示意圖

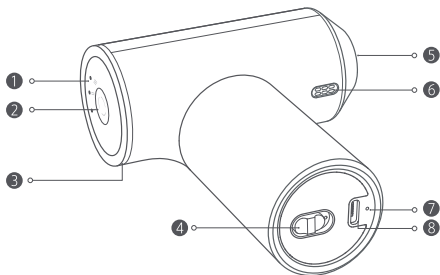


- | | |
|---------------|---------|
| ① 檔位指示燈 | ② 檔位切換鍵 |
| ③ 力道回饋燈環 | ④ 電源開關 |
| ⑤ 槍頭 - 可插入按摩頭 | ⑥ 散熱孔 |
| ⑦ 充電指示燈 | ⑧ 充電接口 |


筋膜槍用途

- 緩解運動後產生的延遲性肌肉酸痛，放鬆緊繃肌肉。
- 舒緩因久坐、不良姿勢導致的腰背肩部肌肉酸痛僵硬。
- 日常按摩放鬆身體。

 2. 產品配件清單



筋膜槍

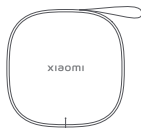 

收納包



快速充電線



說明書



球形按摩頭



U 形按摩頭



平扁按摩頭



電源供應器

 
- 球形按摩頭：適用於肩部、腰背、手臂、臀部、大腿、小腿等大肌肉群。
- U 形按摩頭：適用於腰背部、脊椎兩側、小腿。
- 平扁按摩頭：適用於各肌肉部位的放鬆。

提示：

說明書中的產品、配件、用戶界面等插圖均為示意圖，僅供參考。由於產品的更新與升級，產品實物與示意圖可能略有差異，請以實物為準。

安裝

1. 安裝



- ① 根據使用部位及效果的不同，選擇合適的按摩頭。
- ② 安裝按摩頭時，請將按摩頭手柄插入筋膜槍安裝口圓孔中，需用力旋轉推至底部，與按摩頭安裝示意線齊平，即為安裝成功。

▲ 注意

圖中紅色實線為安裝示意線，實際產品此處為亮面。

2. 拆卸

需要拆卸按摩頭時，握住按摩頭逆時針旋轉，同時將按摩頭從安裝口凹槽中拔出。

▲ 警告

請在關機狀態下安裝、拆卸按摩頭，確保按摩頭安裝穩固後再啟動機器。使用過程中不可調節或裝卸按摩頭，以免夾傷。

使用

1. 充電

- 關機狀態下，將充電線接口插入充電口並接通電源，筋膜槍進入充電狀態，此時機器無法開機使用。
- 開機狀態下，將充電線接口插入充電口並接通電源，筋膜槍停止工作並關機，機器進入充電狀態，此時無法開機使用。

2. 開機/關機/運行模式切換



開機：將底部電源開關推至「I」方向（此時紅色指示標識點露出），此時三個檔位指示燈同時亮起，閃爍一次後，2、3 檔指示燈同時關閉，1 檔指示燈保持常亮。按壓檔位切換按鈕，筋膜槍啟動 1 檔工作。連續使用 15 分鐘後，機器將進入智慧待機模式，如需繼續使用，按壓檔位切換鍵即可重新啟動。（若 10 分鐘內無任何操作，將會自動關機，如需重新開機，需要手動將電源開關推至關機檔位「O」，再次重啟即可使用。）

關機：開機狀態下，將底部電源開關推至「O」方向（此時紅色指示標識點被隱藏），當前模式檔位指示燈熄滅，機器關機。

 
切換檔位：按壓檔位切換鍵，檔位指示燈顯示對應不同檔位強度，可依次切換 1、2、3 檔。

暫停：按兩下檔位切換鍵暫停使用，按一下檔位切換鍵即可繼續工作。暫停後 10 分鐘內無任何操作，機器自動關機，如需重新開機，需要手動將電源開關推至關機檔位「O」，再次重啟即可使用。

堵停重啟：如按壓力度過大，機器將啟動堵停保護裝置，再次按壓檔位切換鍵機器重啟，預設力度為 1 檔。

3. 指示燈

① 檔位指示燈



LED 檔位燈對應檔位強度，從左到右分別為 1 檔、2 檔、3 檔；切換檔位時，對應檔位燈亮白燈。

② 力道回饋燈環指示



 
白灯



橙灯

- 燈環未亮起時，表示按摩力度較小，使用者處於輕度按摩狀態，可以根據自身需求調整力度。
- 燈環白色亮起時，表示按摩力度適中，使用者處於正常按摩狀態，可以根據自身需求調整力度。
- 燈環橙色亮起時，表示按摩力度較大，可以根據自身需求調整力度，避免用力過大肌肉受傷。

③ 充電指示燈



- 紅色呼吸燈閃爍：電量低於 20%，請及時充電。
- 白色呼吸燈閃爍：充電中。
- 白色呼吸燈熄滅：電量已滿，請斷開充電電源。滿電充電時，指示燈呼吸20秒後熄滅。

4. 使用方法

- 選擇合適的按摩頭安裝，開啟筋膜槍，可根據個人體驗切換至合適檔位，建議從低檔位開始嘗試。
- 將按摩頭輕輕按在需要放鬆的肌肉部位，緩慢來回動，如有局部格外酸痛的部位，可在該壓痛點適當施加按壓力度，並停留 15~30 秒。
- 筋膜槍本身已具有衝擊力，施加按壓力度時不宜過分用力，以免損傷肌肉及骨骼。
- 建議在肌肉較飽滿的部位使用，請勿在同一部位停留超過 60 秒。
- 推薦使用時長為 10 分鐘，如仍感到酸痛，可適當延長按摩時間。
- 建議單次使用時長不超過 15 分鐘，連續使用時長不超過 30 分鐘。

維護與保養

1. 清潔

- 請定期用乾淨微濕的軟布、濕巾擦拭機身、按摩頭，並用乾燥的布、紙巾擦乾，放回收納包或包裝盒內。
- 請勿使用水沖洗，或將按摩頭置於陽光下暴曬。
- 清潔時，請確保電源開關已關閉，並拔下充電插頭。
- 請勿使用腐蝕性溶液擦拭機身，否則可能導致產品故障或產品開裂、變色。

2. 儲存

- 請將本品儲存於陰涼乾燥處。
- 請勿將機身置於 40 °C 以上高溫環境、-10 °C 低溫環境下儲存，遠離潮濕、水源、火源及具有腐蝕性的環境，以免影響電池效能。
- 需要存放或攜帶外出時，可將筋膜槍放置於附送的便攜收納包中儲存。
- 請勿碰撞、擠壓、摔落、投擲、刮擦本品。
- 本產品適用於汽車、火車、輪船、飛機等運輸方式，運輸途中應固定好本產品，向上輕放，避免擠壓，防止劇烈震動、碰撞、翻滾及跌落。
- 長時間未使用本品，如需重新啟用，請提前充電。
- 如在存儲過程中出現機器溫度過高、變形、膨脹、電池漏液等現象，請立即停止使用並與售後服務中心聯絡。

故障排除

故障現象	故障原因	解決方法
充電時 充電指示燈不亮	產品和電源供應器插口未連接好	檢查電源供應器是否插好
	電池充滿後指示燈正常熄滅	可正常使用
充電過慢	電池溫度過高或過低	請等待電池溫度恢復正常後再充電
筋膜槍不能工作	產品沒有電或電量不足	請為本產品充電後再使用
	按壓力度過大造成機器堵停	請重新啟動筋膜槍
電機轉動異響	異物進入電機	請聯絡售後服務進行維修
	電機故障	請聯絡售後服務進行維修
機器溫度過高	使用時間過長	請等待機器溫度恢復正常後再使用，建議單次使用時長不超過 15 分鐘，連續使用時長不超過 30 分鐘

如果以上問題仍然存在，請聯絡售後服務

歐盟符合性聲明



珠海雲麥科技有限公司僅此聲明，本裝置已遵循適用指令和歐洲標準，以及修正案的相關規定。如欲了解歐盟符合性聲明的全文，請瀏覽以下網站：<http://www.mi.com/global/service/support/declaration.html>

WEEE 資訊



所有標有此符號的產品均屬於廢電器電子產品（2012/19/EU 指令中所指的 WEEE），不得與未分類的家居廢物一同處理。您應改為將該等廢棄裝置交至政府或當局部門所指定的廢電器電子產品收集站以供回收，從而保護人類健康和環境。正確的處置及回收方式有助防止此類廢棄裝置對環境及人類健康造成潛在的負面影響。如欲進一步了解此等收集站的位置及相關條款及細則，請與安裝人員或當局部門聯絡。

基本規格

產品名稱: Xiaomi 筋膜按摩槍 mini

產品型號: XMFG-M352

產品尺寸: 101 × 139 × 45mm

產品淨重: 380g

適配器額定輸入: 100 – 240 V~, 0.6 A

適配器額定輸出: 5.0 V = 3 A 15 W 9.0 V = 2.23 A 20.0 W

12.0 V = 1.67 A 20.0 W 10.0 V = 2.25 A (最大) 22.5 W (最大)

筋膜槍額定輸入 1: 9 V = 1.5 A (用於快速充電)

筋膜槍額定輸入 2: 5 V = 2 A (用於一般充電)

電池容量: 2600 mAh

電池類型: 可充式鋰電池

工作溫度: 0°C–35°C

工作濕度: 10%–85% RH

生產日期: 詳見產品包裝

委託商: 小米通訊技術有限公司

製造商: 珠海雲麥科技有限公司 (小米生態鏈企業)

製造商地址: 中國廣東省珠海市香洲區興業路88號優特
總部大廈1201/02/03單元

服務電話: 852-30773620

本產品售後服務請查詢官網: www.mi.com/hk/service

說明書版本號: V1.0



MDY-11-EN

Please use the original power adapter MDY-11-EN to charge.



Read this user manual carefully before use.