



Read this manual carefully before use, and retain it for future reference.

Thank you for choosing Xiaomi Air Fryer Essential 6L. This product is for household use only.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

IMPORTANT SAFEGUARDS

- Read all instructions.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Please keep the air fryer and the power cord out of the reach of children aged under 8.
- For household use only.
- If the power cord is damaged or broken, it must be replaced by the manufacturer or after-sales service department to avoid safety hazards.
- The temperature of the accessible surface may rise while the air fryer is working.
- The surface will heat up easily while the air fryer is in use.
- The air fryer should not be operated via an external timer or a separate remote control.
- Do not block the air fryer's air inlet and outlet, nor the heat dissipation vents during use to avoid affecting its normal heat dissipation.
- Any non-professionally trained technicians should not modify the internal wiring of the air fryer.
- Do not use charcoal or other similar fuel sources to heat the basket, or frying plate.
- Do not place the basket on any other heat sources, such as an induction cooker or gas stove.
- Do not plug or unplug the power cord with wet hands to avoid the risk of an electrical shock.
- Do not use a power cord with loose connection or poor contact.
- Do not let the power cord cross through sharp objects to avoid damage to the power cord.

- Do not use the air fryer to store any items, especially flammable, explosive, or corrosive items.
- Do not excessively pinch, bend, twist, or place heavy objects on the power cord to prevent from exposing or breaking its core.
- Stop using the air fryer immediately and unplug it from the power source if it doesn't function normally or malfunctions.
- The air fryer cannot be started without the basket being in place.
- Do not touch the basket directly with your hands during or right after use to avoid getting scalded.
- Do not allow children to get close to or play with the cling wrap and packaging to avoid suffocation accidents.
- Do not use any plastic utensils or normal paper wrapping materials to wrap food for cooking.
- Do not drop this air fryer or bump it against hard objects to avoid damage or malfunction.
- Do not insert pins, wires or other objects into any of the openings of the air fryer to avoid an electrical shock or injury.
- Do not use any accessories that are not recommended by the manufacturer.
- The normal operating altitude range of this product is 0–2000 meters.
- Keep a distance of 30 cm or more between the air outlet and other devices during use.
- Do not move or shake the air fryer during use.
- Do not insert any foreign objects into the safety switch to avoid causing any danger.
- When placing the air fryer in a kitchen cabinet, etc., please ensure that it is well ventilated.
- Please be sure to unplug the air fryer before cleaning or repairing it.
- This product must be used on a level, heat-resistant surface to avoid damage to the product or accidents.
- Ensure that the silicone parts of the air fryer do not come into contact with ethanol or solutions that contain more than 50% of alcohol.
- Please ensure that the electrical outlet the air fryer is plugged into is well grounded to avoid an electrical shock or other safety hazards.

- Only use a grounded electrical outlet with a rated current of 10 A to avoid the risk of fire and other potential hazards.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs, or any other part except for frying basket, frying plate, in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors .
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.



CAUTION: Hot surfaces.


SAVE THESE INSTRUCTIONS.

Polarization instruction:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- a) A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:
- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
 - 3) If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

Product Overview

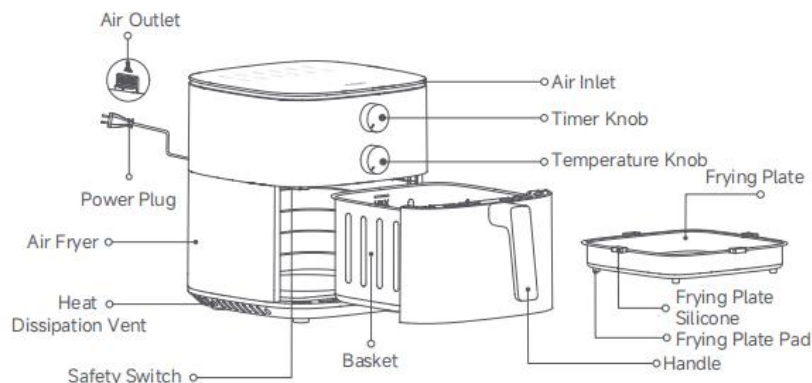

Note: The silicone rubber on the frying plate is made of high temperature resistant food-grade materials to prevent the edges of the frying plate from scratching the coating of the basket and to improve the stability of the frying plate. Do not remove the silicone rubber from the frying plate.

First-time Use

1. Be sure to remove all packaging materials before use.
2. Use hot water and liquid detergent with a non-abrasive sponge to clean the frying plate and basket, then wipe the inside and outside of the air fryer with a clean soft cloth.
3. The air fryer may give off a minor odor on first use. It is recommended to run the air fryer with an empty basket at the maximum temperature (200°C) for 5 minutes to remove the odor. The air fryer may emit a small amount of white smoke or an odor while running with an empty basket, which is normal.

Use

1. Place the air fryer on a stable, level surface and ensure that there is air circulation around the air fryer.
2. Place the frying plate at the bottom of the basket and put the prepared food onto the frying plate. It is recommended to keep the food below the MAX mark on the basket, so as to ensure the best cooking results without the need to turn over the food.
3. Completely push the basket into the air fryer, set the temperature and time according to the recipe selected and your personal preference, and then start the air fryer for cooking.
4. When the basket is pulled out during cooking, the air fryer will pause working. When the basket is pushed in place again, the air fryer will resume cooking.
5. Once the cooking countdown ends, the air fryer will beep once to indicate the completion of cooking. Carefully take out the basket and use tongs to remove the food.

Note: If the food is not fully cooked, push the basket in, set the temperature and time again, and then start the air fryer for secondary cooking.

Cleaning & Maintenance

Unplug the power cord before cleaning and maintaining the air fryer, and wait for it to cool down to a safe temperature before proceeding. Please remove the basket from the air fryer when cleaning the air fryer.

- Surface of the air fryer:

The surface of the air fryer can be wiped with a dry, soft cloth or a sponge moistened with a neutral cleaning detergent.

- Cavity:

To remove stains from the inside of the air fryer, apply a suitable amount of detergent diluted in hot water to its surface and let it sit for about 10 minutes, then use a soft sponge moistened with water to wipe away the detergent residue.

- Basket:

Clean the air fryer after each use. The basket of the air fryer is coated, so do not use any steel wool or other abrasive cleaning materials to clean it as they may damage the coating.

- Frying plate :

Use a soft, cotton cloth or sponge moistened with neutral detergent to wipe it clean, then moisten it with water to wipe away the detergent residue.

Note: The frying plate can be separated and placed in a dishwasher for cleaning; the basket can be washed in water or cleaned in a dishwasher; however, the air fryer can neither be washed in water nor cleaned in a dishwasher.

Cleaning Precautions

1. After using the air fryer, please unplug it in time. Do not place it near any sources of ignition and do not immerse it in water. Do not place the power plug directly on the air fryer, or its surface may be scratched by the power plug.
2. Cleaning and maintenance should only be done after the air fryer has cooled down.
3. Do not use any corrosive or abrasive cleaning materials or detergents.

Note: Regular cleaning and maintenance of the air fryer will help to extend its service life.

Maintenance Tips

- Only professionally trained and qualified technicians should repair the air fryer.
- Others should not repair the air fryer without permission to avoid serious consequences.
- When the air fryer malfunctions, please refer to Troubleshooting before contacting the after-sales service team.
- If the issue persists, please unplug the power cord to disconnect it and contact the after-sales service team.

Troubleshooting

Issue	Possible Causes	Solutions
The air fryer doesn't function.	The air fryer is not connected to a power supply.	Plug the power cord into a grounded electrical outlet.
	The basket is not pushed into place.	Pull out the basket and push it back into place.
	Time and temperature not set	Turn the timer knob and temperature knob to set the time and temperature.
The fan doesn't rotate.	The fan blade is stuck.	Contact the after-sales service team.
	The motor is damaged or other components have a broken circuit.	Contact the after-sales service team.
White smoke is coming out.	Cooking high-fat ingredients	It is normal for the air fryer to emit a lot of smoke when cooking high-fat ingredients.
	Grease residual from the previous cooking in the basket	Clean the air fryer after each cooking.
Can't insert the basket into the air fryer smoothly.	Too many ingredients in the basket.	The ingredients in the basket cannot exceed the MAX mark.
	The basket is not properly inserted.	Properly insert the basket.

Specifications

Name: Air Fryer	Capacity: 6 L	Color: White
Model: MAF13	Rated Frequency: 60 Hz	Net Weight: 4.4 kg
Rated Power: 1550 W	Rated Voltage: 120 V~	Gross Weight: 5.5 kg
Operating Temperature: -10°C to 40°C Package Dimensions: 415 × 326 × 360 mm		

Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.

Manufactured for: Xiaomi Communications Co., Ltd.
For further information, please go to www.mi.com

User Manual Version: V1.0

Lea este manual cuidadosamente antes de usar el producto, y guárdelo para una referencia futura.

Gracias por elegir la Freidora de Aire Xiaomi Essential 6 L. Este producto es solo de uso hogareño.

Las ilustraciones del producto, los accesorios y la interfaz en el manual del usuario son solo para fines de referencia. El producto y sus funciones reales pueden variar debido a las mejoras del este.

Instrucciones de seguridad

- Este aparato es apto para niños mayores de 8 años y personas con capacidades físicas, sensoriales o psíquicas reducidas, o con falta de experiencia y conocimientos, si se les ha proporcionado supervisión o instrucciones en relación con su uso de forma segura y comprenden los riesgos implicados. Los niños no deben jugar con el aparato. El trabajo de limpieza y mantenimiento por parte del usuario no lo deben realizar niños, a menos que sean mayores de 8 años y lo hagan bajo supervisión.
- Mantenga la freidora de aire y el cable de alimentación fuera del alcance de los niños de menos de 8 años.
- El producto es solo de uso hogareño.
- Si el cable de alimentación está dañado o roto, debe ser reemplazado por el fabricante o al departamento de servicio postventa para evitar peligros de seguridad.
- La temperatura de la superficie accesible de la freidora de aire puede aumentar mientras esta funciona.
- Mientras la freidora de aire está en uso, la temperatura de su superficie subirá con facilidad.
- No use la freidora de aire con un temporizador externo o un control remoto separado.
- No bloquee la entrada y la salida de aire de la freidora de aire, ni las ventilaciones de disipación de calor, para evitar afectar su normal disipación de calor mientras la usa.
- No deje que los técnicos que no hayan sido entrenados de forma profesional modifiquen el cableado interno de la freidora de aire.
- No use carbón, u otras combustibles similares, para calentar el contenedor o la bandeja de freír.
- No coloque el contenedor sobre ninguna fuente de calor, como una cocina de inducción o una cocina de gas.


- No enchufe, ni desenchufe, el cable de alimentación con sus manos húmedas, para evitar el riesgo de sufrir una descarga eléctrica.
- No use un cable de alimentación con una conexión floja o un contacto pobre.
- No deje que el cable de alimentación pase por objetos filosos, para evitar dañarlo.
- No use una freidora de aire para almacenar objetos, en especial aquellos que son inflamables, explosivos o corrosivos.
- No apriete, doble o tuerza demasiado el cable de alimentación, ni ponga objetos pesados sobre él, para evitar exponer o romper su núcleo.
- Si la freidora de aire no funciona normalmente, o funciona mal, deje de usarla de inmediato y desconéctela de la fuente de alimentación.
- No podrá iniciar la freidora de aire si el contenedor no está en su lugar.
- No toque el contenedor de forma directa con sus manos, durante su uso o después, para evitar quemarse.
- No deje que los niños se acerquen ni jueguen con el papel film y los materiales del embalaje para evitar accidentes por asfixia.
- No use ningún utensilio de plástico o papel como envoltorio para envolver la comida y cocinarla.
- No deje caer esta freidora de aire ni la golpee contra objetos duros para evitar daños o su mal funcionamiento.
- No inserte pines, cables, ni otros objetos en ninguno de los orificios de la freidora de aire, para evitar una descarga eléctrica o lesión.
- No use ningún accesorio que no haya sido recomendado por el fabricante.
- La rango de altitud normal para el funcionamiento del producto es de 0-2000 metros.
- Durante su uso, mantenga una distancia de 30 cm, o más, entre la salida de aire y otros dispositivos.
- No mueva ni agite la freidora de aire mientras la use.
- No inserte objetos extraños en el interruptor de seguridad para evitar cualquier peligro.
- Cuando coloque la freidora de aire en una alacena, etc., asegúrese de que el lugar esté bien ventilado.

- Asegúrese de desenchufar la freidora de aire antes de limpiarla o repararla.
- Este producto debe usarse sobre una superficie pareja y resistente al calor, para evitar daños al producto o accidentes.
- Asegúrese de que las partes de silicona de la freidora de aire no hagan contacto con etanol o con las soluciones que contengan más de 50 % de alcohol.
- Asegúrese de que la toma de corriente, donde esté conectada la freidora de aire, tenga una correcta puesta a tierra, para evitar descargas eléctricas u otros peligros de seguridad.
- Solo use un enchufe eléctrico con puesta a tierra con una corriente nominal de 10 A para evitar el riesgo de fuego y otros posibles peligros.



PRECAUCIÓN: Superficies calientes.

Descripción del producto

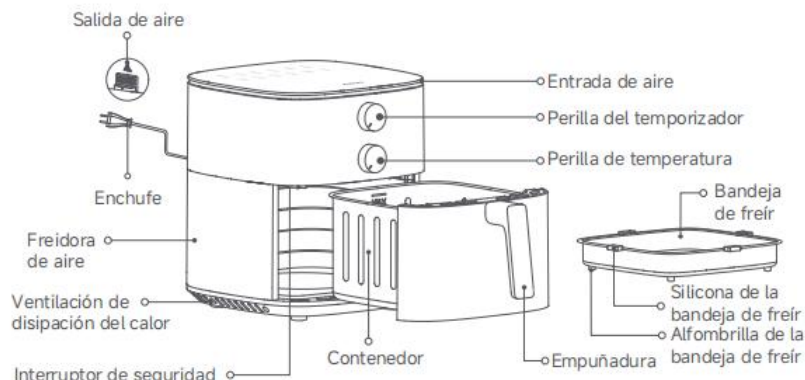

Nota: La goma de silicona de la bandeja de freír está hecha con materiales aptos para su contacto con los alimentos y resistentes a las altas temperaturas, para prevenir que los bordes de la bandeja de freír raye el recubrimiento del contenedor, y para mejorar la estabilidad de la bandeja de freír. No remueva la goma de silicona de la bandeja de freír.

Primer uso

1. Asegúrese de eliminar todos los materiales de embalaje antes de su primero uso.
2. Limpie la bandeja de freír y el contenedor con agua caliente y detergente líquido usando una esponja no abrasiva, luego seque el interior y exterior de la freidora de aire con un paño suave y limpio.
3. La freidora de aire puede emitir un poco de olor en su primer uso. Le recomendamos que deje funcionar la freidora de aire con su contenedor vacío, bajo la temperatura máxima (200°C), por 5 minutos, para eliminar el olor. La freidora de aire emitirá un poco de humo blanco, o un poco de olor, mientras funciona con el contenedor vacío; esto es normal.

Uso

1. Coloque la freidora de aire sobre una superficie estable y pareja, para garantizar que el aire circule a su alrededor.
2. Coloque la bandeja de freír en la parte inferior del contenedor y coloque la comida preparada en la bandeja de freír. Se recomienda mantener los alimentos por debajo de la marca MAX en el contenedor, para asegurar el mejor resultado de cocción posible, sin necesidad de voltear la comida.
3. Introduzca completamente el contenedor en la freidora de aire, ajuste la temperatura y el tiempo según la receta seleccionada y su preferencia personal, y luego inicie la cocción con la freidora de aire.
4. Cuando extraiga el contenedor durante la cocción, la freidora de aire pausará su funcionamiento. Al volver a colocar el contenedor en su posición, la freidora de aire reanudará la cocción.
5. Luego de que termine la cuenta regresiva de la cocción, la freidora de aire emitirá un pitido para indicar que se completó el cocinado. Saque el contenedor con cuidado y use unas pinzas para sacar la comida.

Nota: Si la comida no está completamente cocida, vuelva a introducir el contenedor, ajuste de nuevo la temperatura y el tiempo, y luego inicie la freidora de aire para empezar su segunda cocción.

Limpieza y mantenimiento

Desenchufe el cable de alimentación antes de limpiar o mantener la freidora de aire, y espere a que se enfríe a una temperatura segura antes de seguir. Remueva el contenedor de la freidora de aire cuando la limpie.

• Superficie de la freidora de aire:

Puede limpiar la superficie de la freidora de aire con un paño seco y suave o una esponja humedecida con un detergente de limpieza neutral.

• Cavidad:

Para remover las manchas del interior de la freidora de aire, aplique una cantidad apropiada de detergente diluido en agua caliente en la superficie y deje reposar durante diez minutos. Luego, use una esponja suave y humedecida con agua para limpiar los restos del detergente.

• Contenedor:

Limpie la freidora de aire después de cada uso. El contenedor de la freidora de aire tiene un recubrimiento. No use lana de acero, ni otros productos de limpieza abrasivos, para limpiarlo, ya que podrían dañar su recubrimiento.

• Bandeja de freír:

Puede usar un paño de algodón suave, o una esponja humedecida con detergente neutral para limpiar, luego humedézcala con agua para remover los restos de detergente.

Nota: La bandeja de freír puede limpiarse en un lavavajillas de forma separada; el contenedor puede limpiarse con agua o en un lavavajillas; sin embargo, la freidora de aire no puede lavarse ni en agua ni en un lavavajillas.

Precauciones de la limpieza

1. Luego de usar la freidora de aire, desconecte el enchufe a tiempo. No coloque la freidora de aire cerca de una fuente de fuego y no la sumerja en el agua. No coloque el enchufe directamente sobre la freidora de aire, ya que podría rayar su superficie.
2. La limpieza y el mantenimiento solo deben hacerse luego de que la freidora de aire se enfríe.
3. No use ningún material de limpieza corrosivo o abrasivo ni detergentes.

Nota: Limpiar y mantener la freidora de aire de forma regular ayudará a prolongar su vida útil.

Consejos de mantenimiento

- Solo los técnicos con un entrenamiento profesional y calificados deben reparar la freidora de aire.
- No deje que ningún tercero repare la freidora de aire sin permiso para evitar consecuencias serias.
- Cuando la freidora de aire funcione de forma irregular, consulte la sección de Solución de problemas antes de contactar al equipo del servicio posventa.
- Si el problema persiste, desenchufe el cable de alimentación, desconéctelo, y contacte al equipo del servicio posventa.

Solución de problemas

Problema	Posibles causas	Soluciones
La freidora de aire no funciona.	La freidora de aire no está conectada a una fuente de energía.	Enchufe el cable de alimentación a una toma de corriente conectada a tierra.
	El contenedor no está puesto en su lugar.	Saque el contenedor y vuelva a colocarlo en su lugar.
	Tiempo y temperatura no establecidos	Gire la perilla del temporizador y la perilla de temperatura para establecer el tiempo y la temperatura.
El ventilador no gira.	La hoja del ventilador está atascada.	Póngase en contacto con el equipo de servicio postventa.
	El motor está dañado, u otros componentes tienen un circuito roto.	Póngase en contacto con el equipo de servicio postventa.
Sale humo blanco.	Cocción de ingredientes con alto contenido de grasa	Es normal que la freidora de aire emita mucho humo al cocinar ingredientes con alto contenido de grasa.
	Residuos de grasa de la cocción anterior en el contenedor	Limpie la freidora de aire después de cada cocción.
Cuesta insertar el contenedor en la freidora de aire.	El contenedor tiene muchos ingredientes.	Los ingredientes en el contenedor no pueden superar la marca MAX.
	El contenedor no se ha insertado de forma apropiada.	Inserte el contenedor de forma apropiada.

Especificaciones

Nombre: freidora de aire	Capacidad: 6 L	Color: Blanco
Modelo: MAF13	Frecuencia nominal: 60 Hz	Peso neto: 4.4 kg
Potencia nominal: 1550 W	Voltaje nominal: 120 V~	Peso bruto: 5.5 kg
Temperatura operativa: -10°C a 40°C	Dimensiones del paquete: 415 × 326 × 360 mm	

En condiciones normales de uso, este equipo debe mantener una distancia de separación entre la antena y el cuerpo del usuario de al menos 20 cm.

Fabricado para: Xiaomi Communications Co., Ltd.
Para obtener más información, visite www.mi.com

Versión del manual del usuario: V1.0

